

# Sew Caroline

SEWING PATTERNS + ACCESSORIES

## BOW THROW PILLOW

CREATE AN ACCESSORY FOR YOUR COUCH OR FAVORITE READING CHAIR OUT OF A COZY KNIT ADORNED WITH THE PERFECT BOW.

## SUPPLIES

2/3 YARD KNIT FABRIC (SOLID)

1/2 YARD CONTRASTING KNIT FABRIC

STRETCH NEEDLE

1/2 YARD FUSIBLE LIGHT WEIGHT INTERFACING


FABRIC SCISSORS

COORDINATING THREAD

JANOME SEWING MACHINE

## STEP ONE

CUT ONE 20.5" SQUARE OF THE SOLID KNIT FABRIC, TWO 20.5" X 14" RECTANGLES, ONE 22" X 14" RECTANGLE, AND ONE 3" X 6" RECTANGLE. CUT ONE 22" X 14" AND ONE 4" X 4" RECTANGLES FROM THE LIGHT WEIGHT FUSIBLE INTERFACING. APPLY THE INTERFACING TO THE WRONG SIDE OF THE COORDINATING KNIT RECTANGLES.

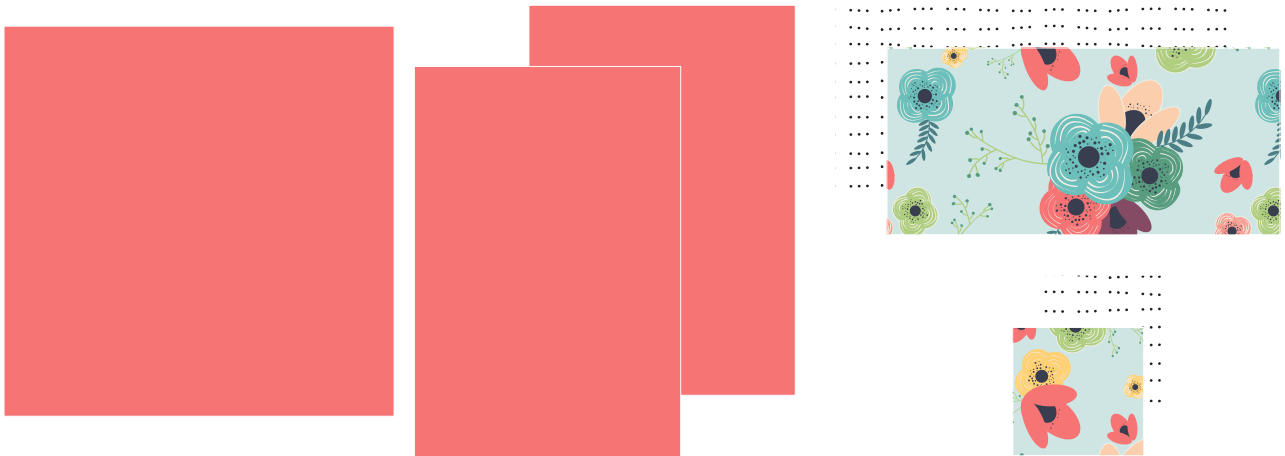

## STEP TWO



TAKE THE TWO 20.5" X 14", THE 22" X 14", AND THE 3" X 6" RECTANGLES AND HEM TOWARDS THE WRONG SIDE OF THE FABRIC AT 1/2" ON THE LONGER EDGES.

## STEP THREE



CENTER THE CONTRAST FABRIC ON TOP OF THE 20.5" SQUARE FABRIC AND BASTE THE SHORT EDGES TO THE SQUARE AT 1/4". SLIP THE 4" X 4" SQUARE BEHIND THE CONTRAST FABRIC WITH RIGHT SIDES TOGETHER AND STITCH TOGETHER CLOSE TO THE CONTRAST FABRIC TO CREATE THE BOW LOOK. TRIM THE EXCESS SEAM ALLOWANCE AND FLIP TO THE RIGHT SIDE.



## STEP FOUR



LAYER THE TWO 20.5" X 14" RECTANGLES ON TOP OF THE FRONT, RIGHT SIDES TOGETHER. ALIGN ONE RECTANGLE TO THE LEFT AND ONE TO THE RIGHT. PIN IN PLACE AND STITCH AT 1/2". INSERT A 20" X 20" PILLOW AND DISPLAY!

